


How to find the PNP/5280 BDM Connector and the RCM Jumper

The 169-pin PGA connector of the DIL/NetPC PNP/5280 includes the signals for BDM (Background Debug Mode) and the RCM (Remote Console Mode) jumper. The BDM and RCM pins are also available at connector J10 of the evaluation board DNP/EVA8.

- **1. Step:** Watch the following picture and locate the position of the BDM Connector and RCM Jumper within this picture. The picture shows the connector J10 of the evaluation board DNP/EVA8.

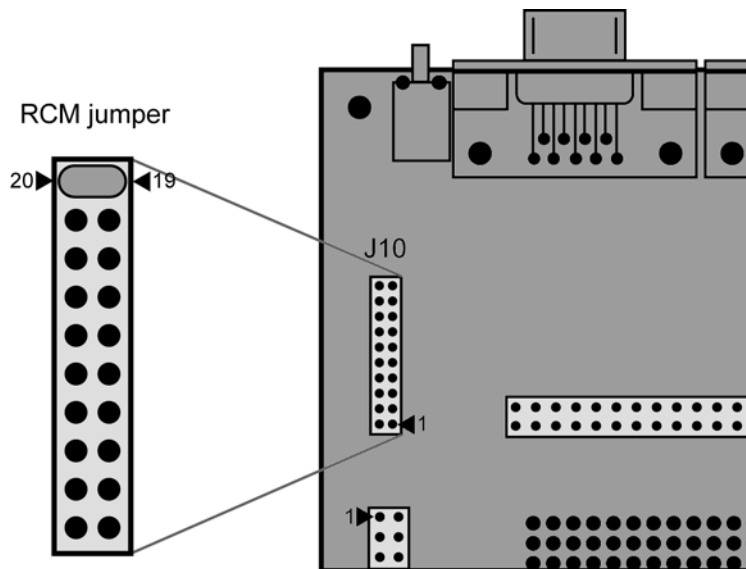

Please note: The DIL/NetPCs PNP/5280 and DNP/5280 are software compatible. Only the mechanical form factor and the pin out is different. The Motorola dBUG ROM monitor and the Linux operating system of these two systems is absolute identical. It is also possible to use the DNP/5280 BDM software for the PNP/5280.

That is all.