


How to use the DNP/9200 Linux FTP Server


The DIL/NetPC DNP/9200 Linux comes with a pre-installed FTP server. This server allows the file transfer between a PC and the DNP/9200.

- **1. Step:** Set-up a Ethernet link between the DNP/9200 10/100 Mbps Ethernet interface and the Ethernet interface of your PC system. Check the IP address of the PC system (Windows: **ipconfig** command; Linux: **ifconfig** command). **The default IP address (factory set-up) of the DNP/9200 is 192.168.0.126. Please use 192.168.0.1 for your PC system.** Then power-up your DNP/9200.
- **2. Step:** Run a FTP client program on your PC system. Set the session parameters for your FTP client to “IP address: **192.168.0.126**, user name: **guest**, password **guest**”.

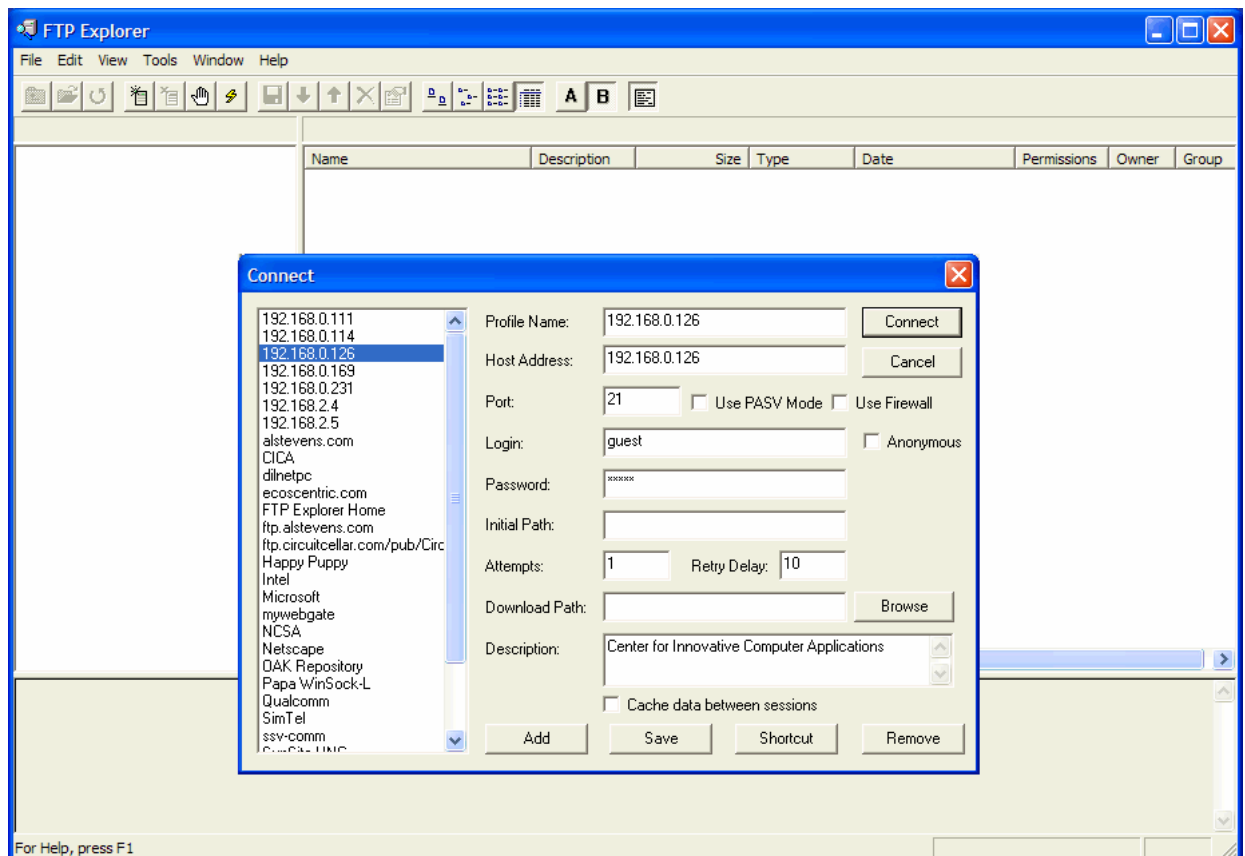


Please note: The DNP/9200 default directory for the FTP user name **guest** is `/home/guest`. This directory is located within the DNP/9200 RAM disk.

- **3. Step:** Connect your FTP client with the DIL/NetPC DNP/9200 FTP server. Please watch the DNP/9200 default FTP directory.
- **4. Step:** Transfer some files from your PC to the DIL/NetPC DNP/9200. The DNP/9200 stores this files in the DNP/9200 default FTP directory.

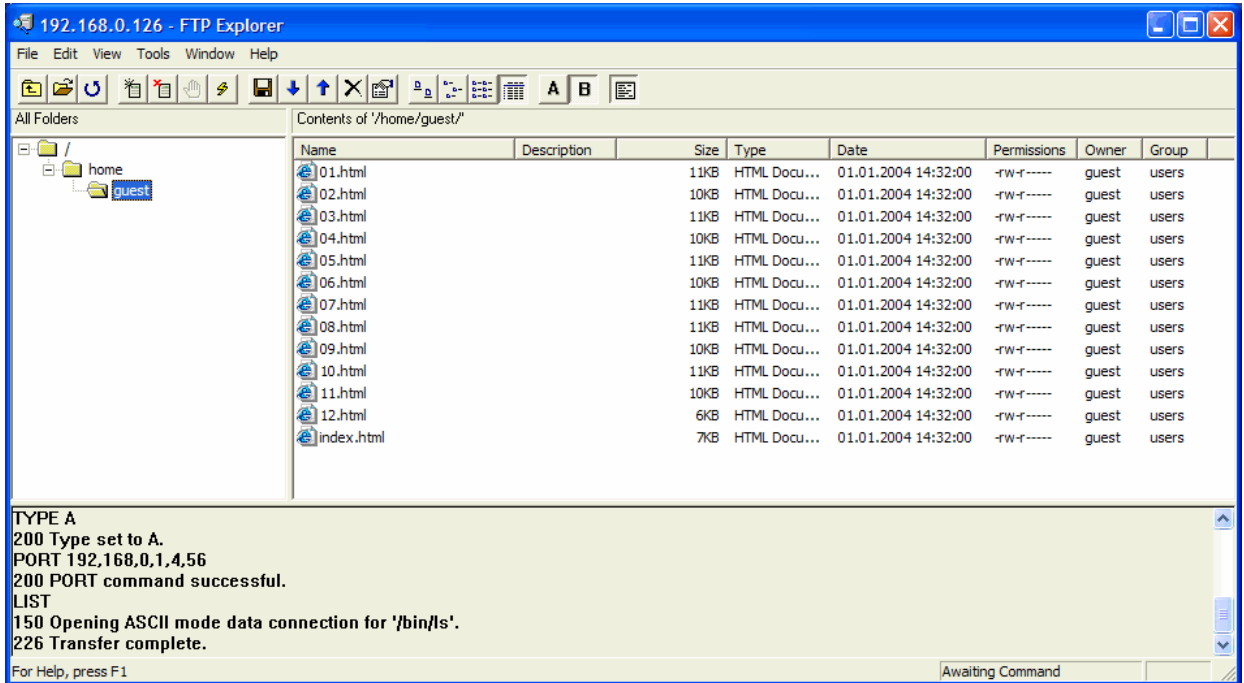

- **5. Step:** Check the files with a Telnet session. Move to the DNP/9200 default FTP directory /home/guest within your Telnet session.

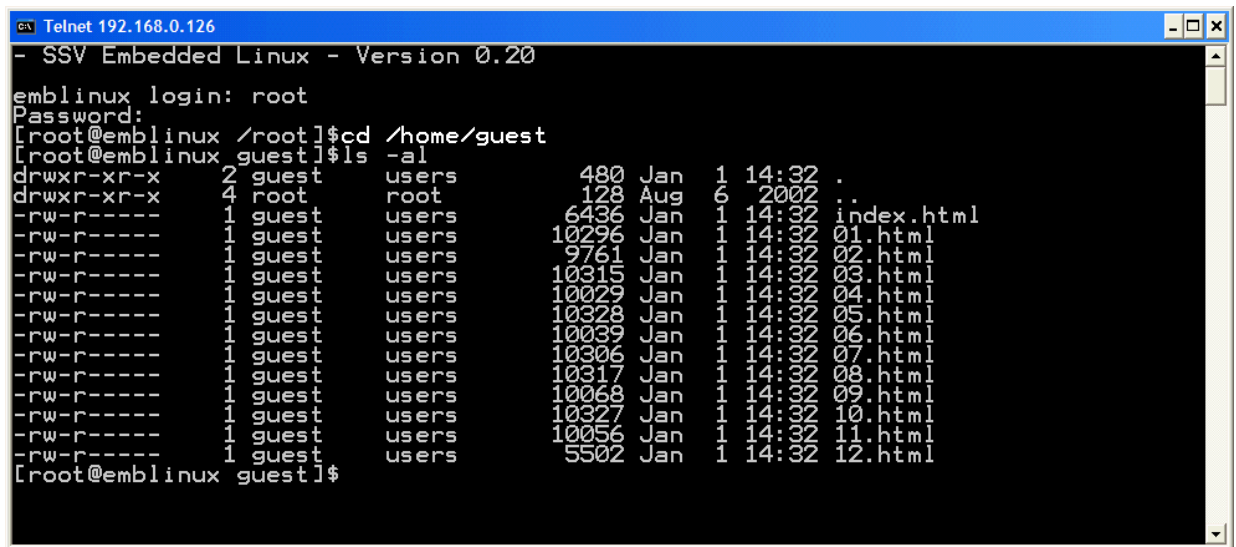

That is all.