

## How to write a CGI Program for the DNP/5280 Embedded Web server


The DIL/NetPC DNP/5280 default Linux configuration comes with a pre-installed embedded Web server. The object storage space for HTML pages, pictures, CGI programs and other objects of this Web server is located within the DNP/5280 flash memory.

- **1. Step:** Enter the following C source code lines with a text editor program and save these lines to a file with the name `cgihello.c` on your Linux-based PC.

```
#include <stdio.h>
#include <stdlib.h>

int main (void)
{
    printf ("Content-type: text/html\n\n");

    printf (<html>\n");
    printf (<head>\n");
    printf (<title>\nCGI Hello Demo</title>\n");
    printf (</head>\n");
    printf (<body>\n");
    printf (<h1>\nHello from CGI program.</h1>\n");
    printf (</body>\n");
    printf (</html>\n");
    return (EXIT_SUCCESS);
}
```

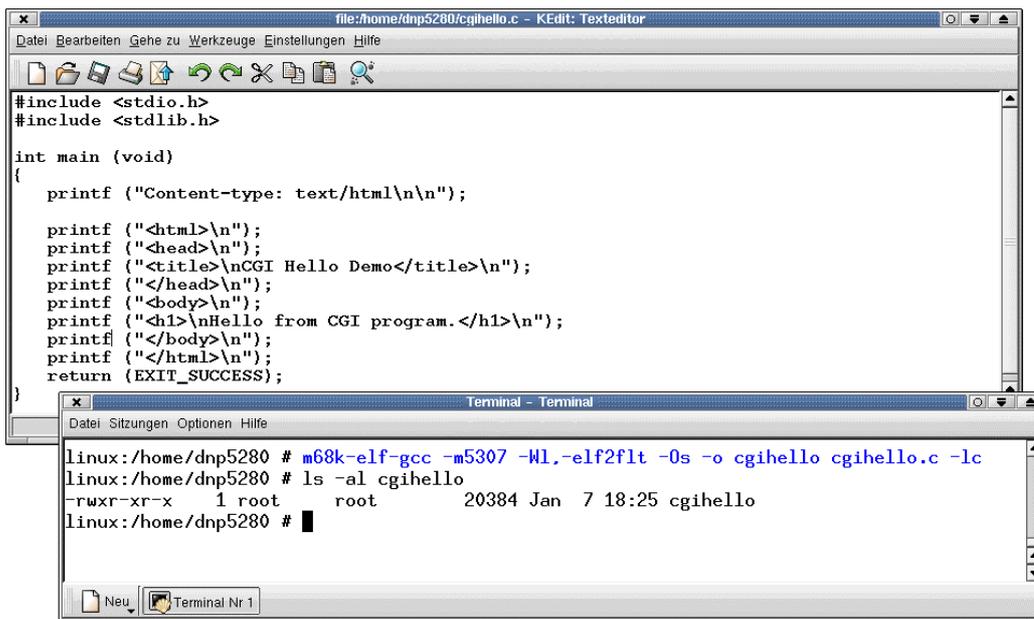

- **2. Step:** Run your GNU C cross compiler and linker for `cgihello.c`. Then transfer the


executable with TFTP to the DIL/NetPC DNP/5280. Make sure, that the executable is stored to the directory `/home/httpd/cgi-bin` within the DNP/5280 flash memory. Create this directory if necessary. The command line for the GNU C cross compiler is:

```
m68k-elf-gcc -m5307 -Wl,-elf2flt -Os -o cghello cghello.c -lc
```

Use a Telnet session for the TFTP file transfer command. Make sure that the file with the CGI executable owns the necessary attributes. The commands for the DNP/5280 Telnet session are:

```
cd /home/httpd/cgi-bin
tftp -g -l cghello 192.168.0.1
chmod +x cghello
```

With this command lines we assumes, that your Linux-based PC is using the IP address 192.168.0.1.

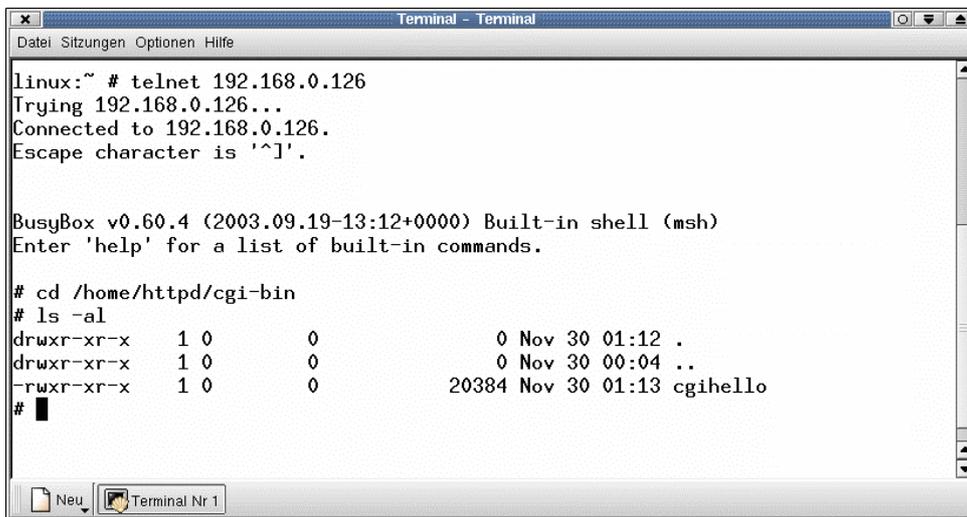

```
linux:~ # telnet 192.168.0.126
Trying 192.168.0.126...
Connected to 192.168.0.126.
Escape character is '^]'.

BusyBox v0.60.4 (2003.09.19-13:12+0000) Built-in shell (msh)
Enter 'help' for a list of built-in commands.

# cd /home/httpd/cgi-bin
# ls -al
drwxr-xr-x  1 0      0          0 Nov 30 01:12 .
drwxr-xr-x  1 0      0          0 Nov 30 00:04 ..
-rwxr-xr-x  1 0      0      20384 Nov 30 01:13 cghello
# █
```

- **3. Step:** Run your PC Web browser and access the CGI program with your browser. Use the URL `http://192.168.0.126/cgi-bin/cghello`. This URL assumes, that your DNP/5280 is using the IP address 192.168.0.126.

